



# Make 'em Come Clean

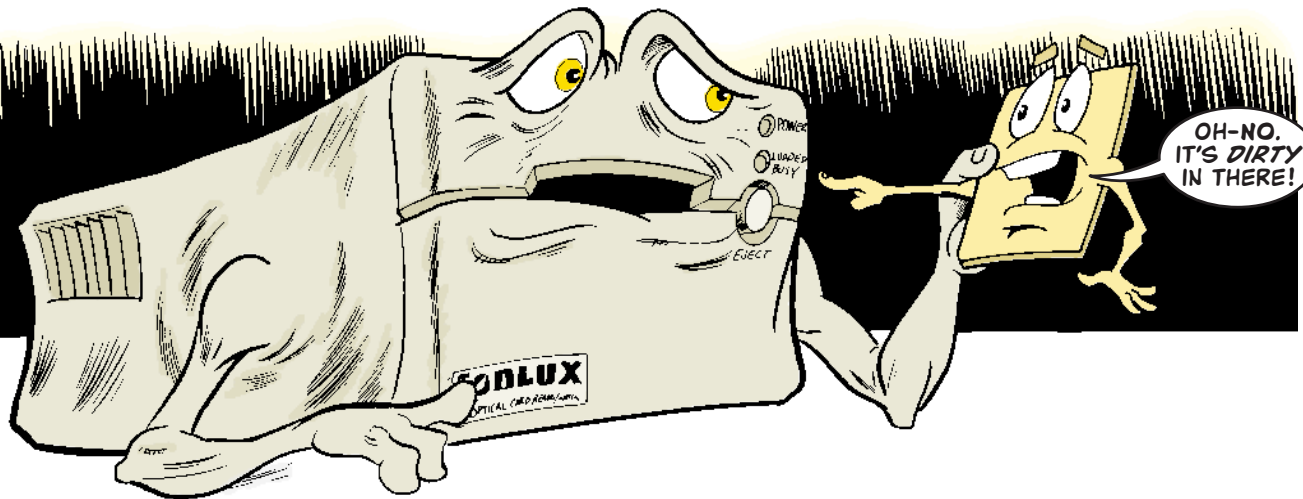


**T**he LC-305S optical reader of the automated manifest system needs to be cleaned every couple of weeks. Without cleaning, the dirt and dust that accumulates in the reader scratches the surface of the optical cards and causes read and write errors.

Here's how to regularly clean the unit:

Turn the reader on and make sure the drive bay is empty.

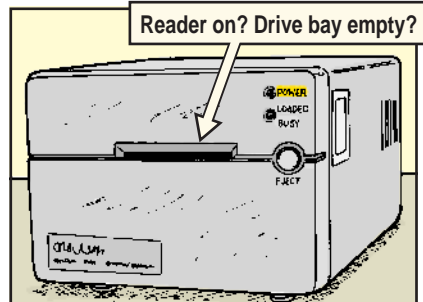


Remove the cleaning card, NSN 7930-01-467-4060, from its pouch and put it in the drive bay. Do it quickly before any of the isopropyl alcohol on the card evaporates.

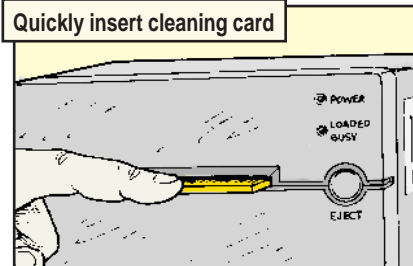

You should hear the drive rollers and head working to read the card. While they're doing that, they're being cleaned.

After just a couple of seconds, the card should be automatically ejected. But sometimes it gets stuck. If that hap-


pens, don't try to remove it by hand. That could damage the rollers or knock them out of alignment. Instead, press the eject button until the card is ejected.

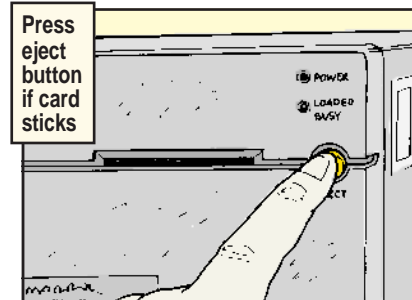

If, after several attempts, it still won't come out, wait 5 minutes or until the alcohol evaporates. Once the alcohol has completely evaporated, the card should automatically eject. If it doesn't, press the eject button several more times.

If the card remains stuck, turn the reader in for service.

After the first cleaning card is ejected, put in a new card. This time, hold onto the card once you've inserted it in the drive—don't let go! This will force the load rollers to work against the cleaning card and will remove any built up grease or oil. Remove the card from the drive after 4-5 seconds.

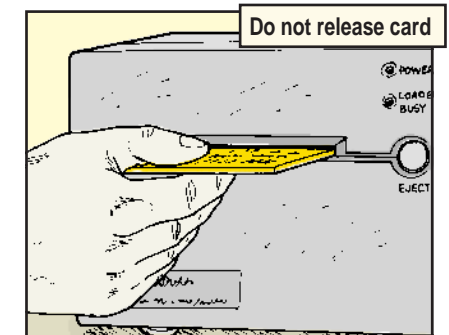

Never re-use a card. You'll just put the dirt and debris back into your reader. Also, be aware that the cleaning card is saturated with isopropyl alcohol and should not be used near an open flame.

You won't find this info in any TM, so keep it handy.

If you need warranty or maintenance info on your reader, call the Intermec tech support hotline:

**CONUS (800) 892-7007**

**Germany 0130-82-21-55**

**Korea 007-981-6800-3076**

The e-mail address is:

**support@intermec.com**